


PARTS

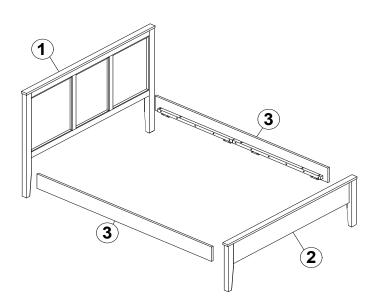



NO. PART	LIST	QTY

(1) Headboard 01

- (2) Footboard 01
- (3) Side Rails 02

Fittings

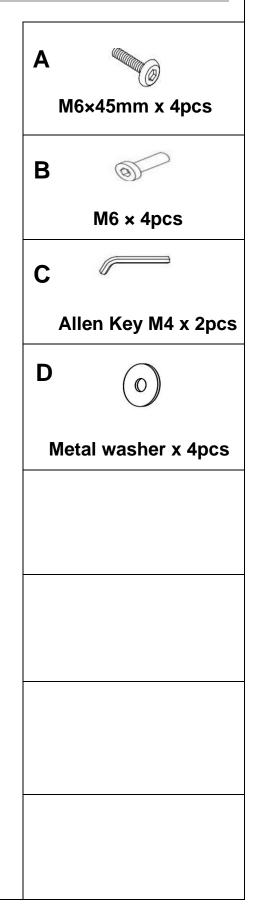

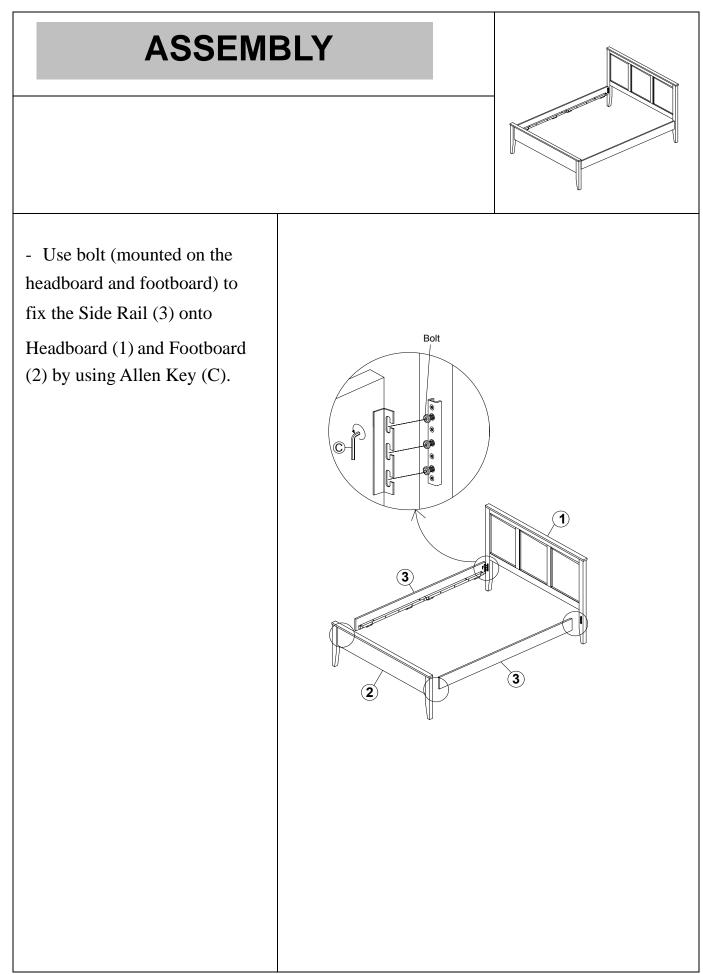

ASSEMBLY

SPRUNG SLATS

NOTE: SPRUNG SLATS SUPPLY SEPAR ATELY

(1) Use the bolt to fix supportleg onto the slat frame.

Please note that these bolts are to be found inside the slat frame box.

(2) Carefully locate the slats onto the unit.

(3) Use bolt (A) and JCN nut(B) to fix the unit using AllenKey (C).

