


# FEATHER & BLACK

## BORDEAUX BEDFRAME ASSEMBLY GUIDE

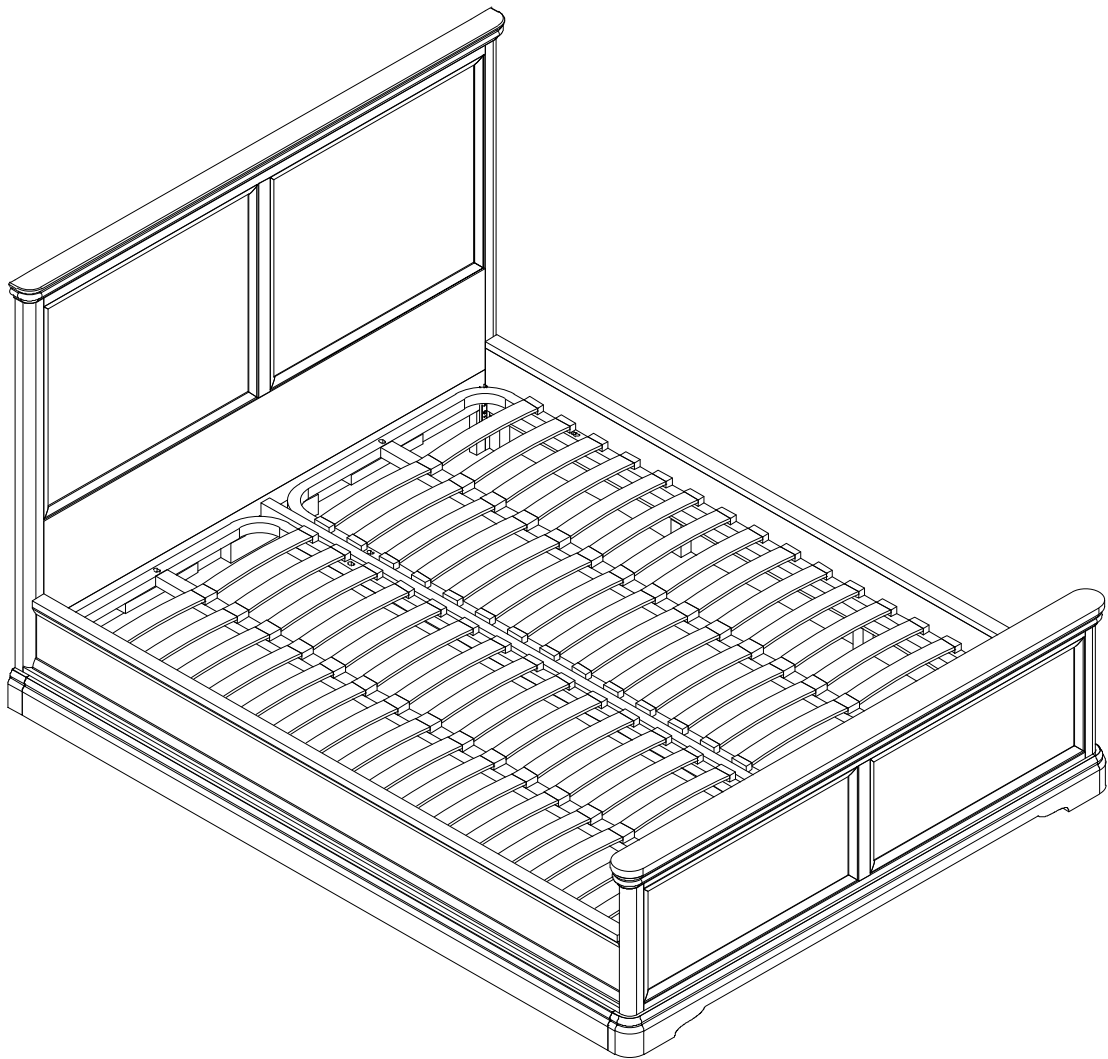

# WELCOME TO THE FEATHER & BLACK COMMUNITY.

Since 2004, we've been dedicated to creating beautifully crafted bedroom furniture that's made to last. We believe your home is a reflection of you, that's why every piece we create is thoughtfully designed and carefully finished.

We hope your new addition feels right at home. If you need anything at all, our team is here to help – simply call 01494 415 399 (option 2), email [customerservices@featherandblack.com](mailto:customerservices@featherandblack.com), or chat to us live at [featherandblack.com](https://featherandblack.com).

We love seeing our designs styled in real homes – so if you're happy to share, tag us on Instagram [@featherandblack](https://www.instagram.com/featherandblack) and use [#featherandblack](https://www.instagram.com/featherandblack).

From our home to yours, thank you for choosing furniture that's made to be lived in and loved for life.

## THE FEATHER & BLACK TEAM

PLEASE RETAIN THESE ASSEMBLY INSTRUCTIONS FOR FUTURE USE

# FEATHER & BLACK

## BORDEAUX BEDFRAME

### BEFORE YOU START

Votre produit est livré en plusieurs colis.

Bien lire les instructions avant de commencer l'assemblage.

Please read these instructions fully prior to assembly to familiarise yourself with the various stages of construction. Carefully open all packs supplied and check the contents against the parts and fittings check list.

Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

This item is heavy once assembled. Please try to assemble the item as close as possible to the point of use. Take care when moving the item to avoid personal injury or damage to the product and always lift rather than drag.

There are small components used in the construction of this furniture as well as plastic packaging, these should be kept away from young children whilst assembling.

#### PRODUCT SAFETY

All assembly fastenings should always be tightened properly, and care should be taken to ensure that no fittings are loose.

Periodically check and ensure that all components are in their proper position, free from damage, and that all connectors are tight.

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of time the colour might lighten or fade slightly due to light exposure.

#### PRODUCT CARE

To clean, slightly moisten cloth with water and wipe surfaces. A damp cloth holds dust and prevents damage. Repeat with a dry, soft, lint-free cloth. Do not use abrasives or cleaning products which may contain ammonia or solvents.

#### NUMBER OF PEOPLE REQUIRED TO ASSEMBLE

Two people to assemble the product and two people to lift in to position.



#### TIME TO ASSEMBLE




30 minutes

# FEATHER & BLACK

## BORDEAUX BEDFRAME


Product size: Double: 1300mm H x 2050mm W x 1698mm D  
King: 1300mm H x 2150mm W x 1998mm D  
Super King: 1300mm H x 2150mm W x 1548mm D

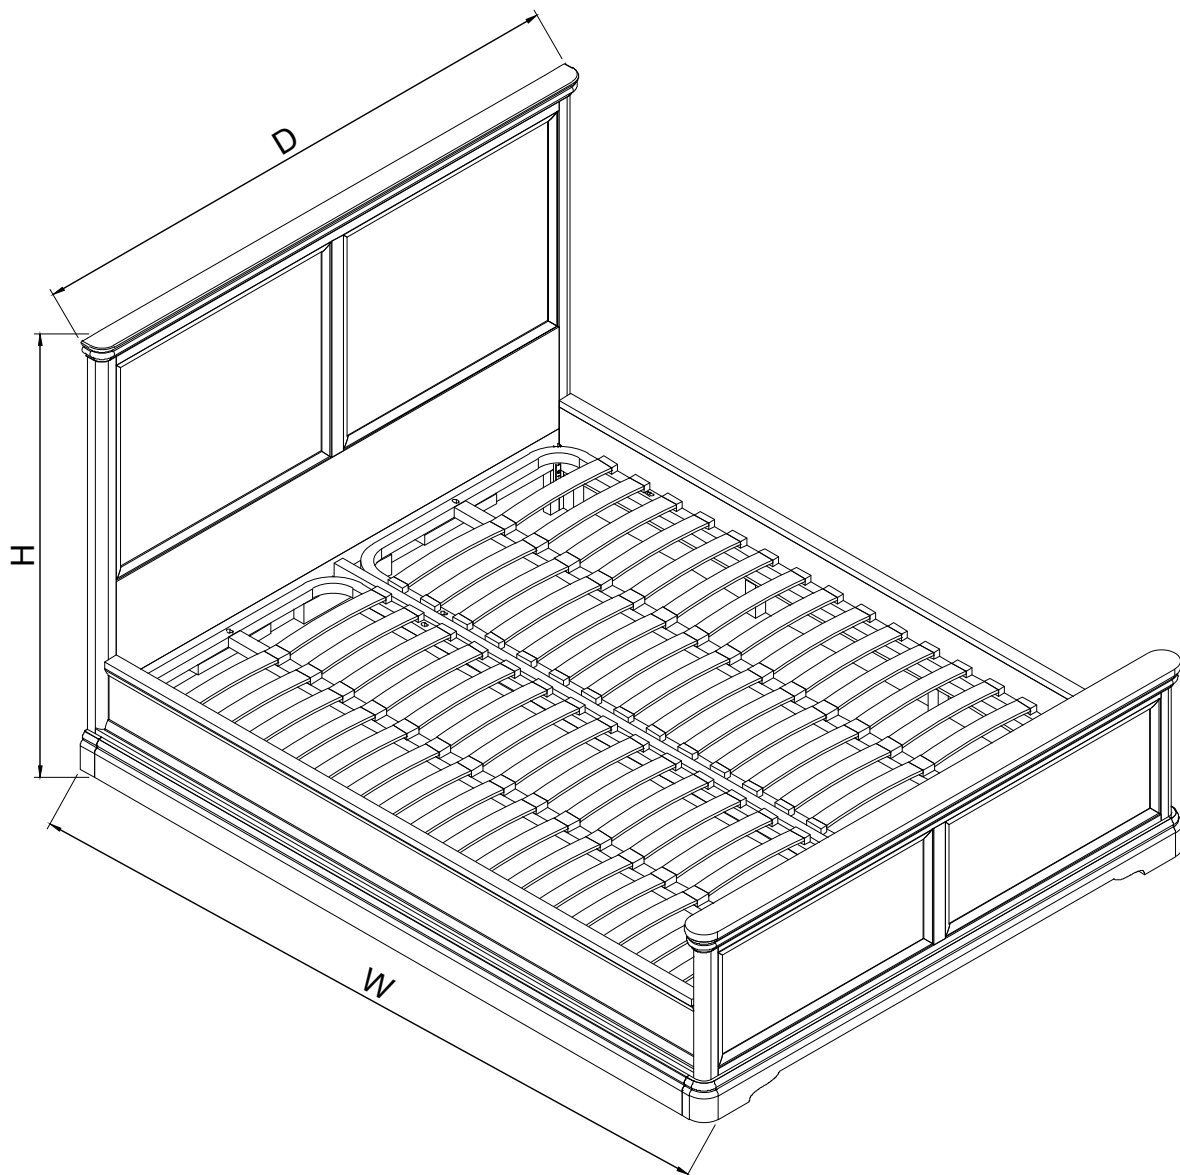


# FEATHER & BLACK

## BORDEAUX BEDFRAME


### COMPONENTS SUPPLIED (NOT ACTUAL SIZE)

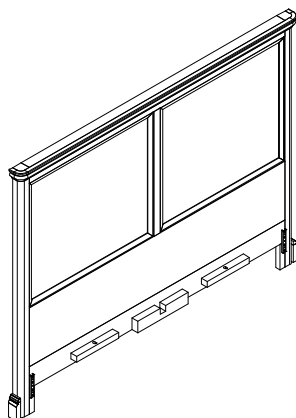


A: Headboard  
Quantity: 1 pc  
Box: 1

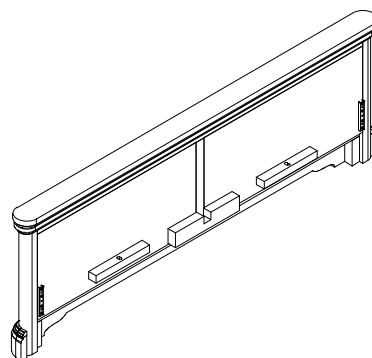

B: Footboard  
Quantity: 1 pc  
Box: 2

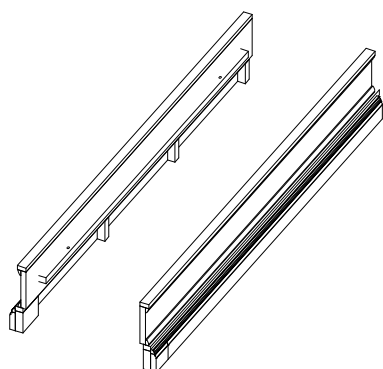


C: Side rail  
Quantity: 2 pcs  
Box: 3

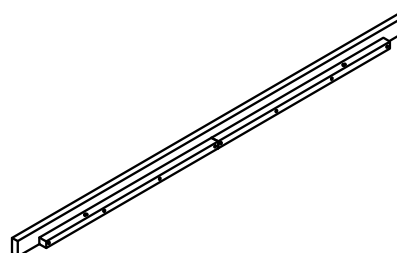

D: Centre rail  
Quantity: 1 pc  
Box: 3

### FIXTURES AND FITTINGS SUPPLIED (NOT ACTUAL SIZE)

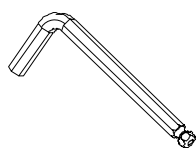


1: Allen Key  
M4x110 (mm)  
Quantity: 2 pcs  
Box: 1




2: Bolt  
M6x55 (mm)  
Quantity: 12 pcs  
Box: 1



3: Large Washer  
M6x16x1.5 (mm)  
Quantity: 12 pcs  
Box: 1




4: Nutsert  
M6x20(mm)  
Quantity: 12 pcs  
Box: 1



# FEATHER & BLACK


## BORDEAUX BEDFRAME

1.

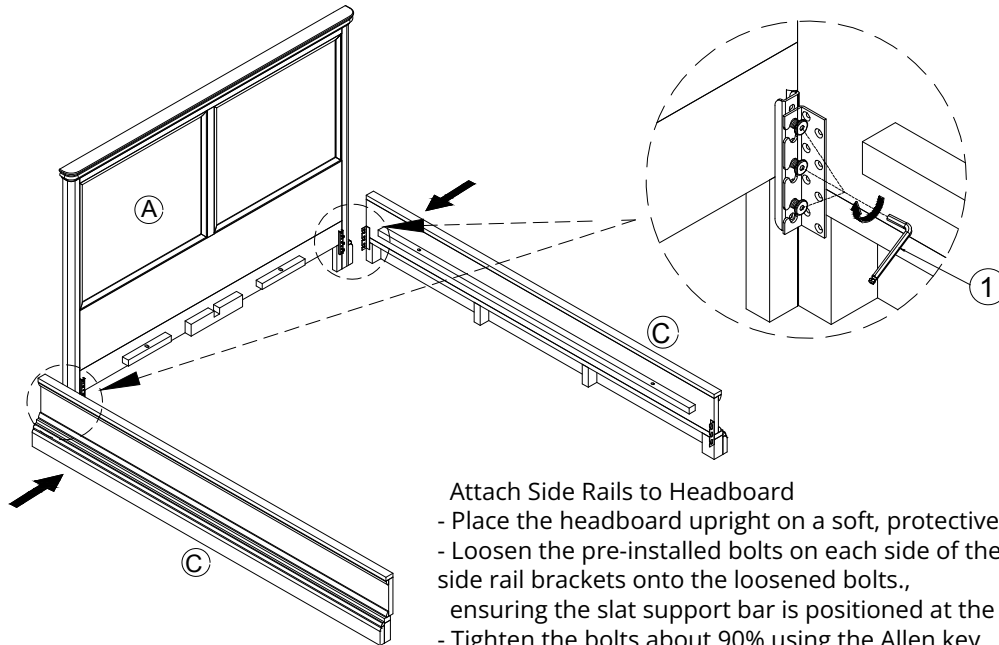


### Attach Side Rails to Headboard

- Place the headboard upright on a soft, protective surface.
- Loosen the pre-installed bolts on each side of the headboard.
- Slide the side rail brackets onto the loosened bolts, ensuring the slat support bar is positioned at the bottom.
- Tighten the bolts about 90% using the Allen key (leave a little slack for adjustment later).

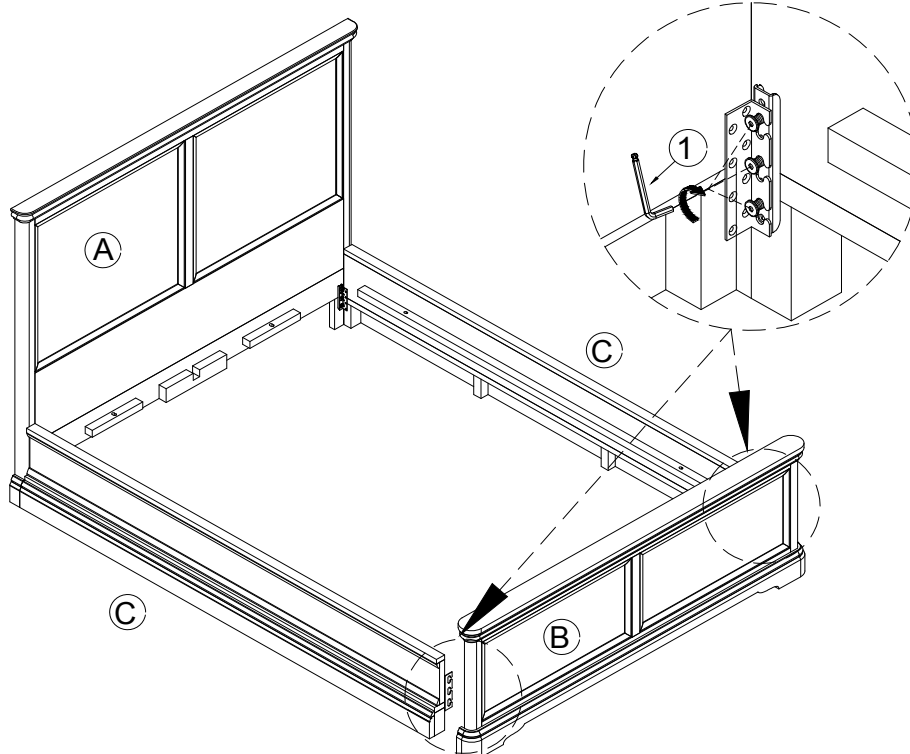

### Attach Footboard

- Loosen the pre-installed bolts on the footboard.
- Align the footboard with the ends of the side rails.
- Slide the side rail brackets onto the bolts on each side of the footboard.
- Check that the frame is square and aligned, then fully tighten all bolts at both the headboard and footboard.

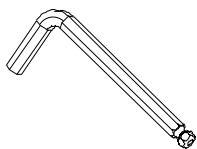


1: Allen Key

# FEATHER & BLACK

## BORDEAUX BEDFRAME

### 2. Install Centre Rail

Position the centre rail between the headboard and footboard for support.


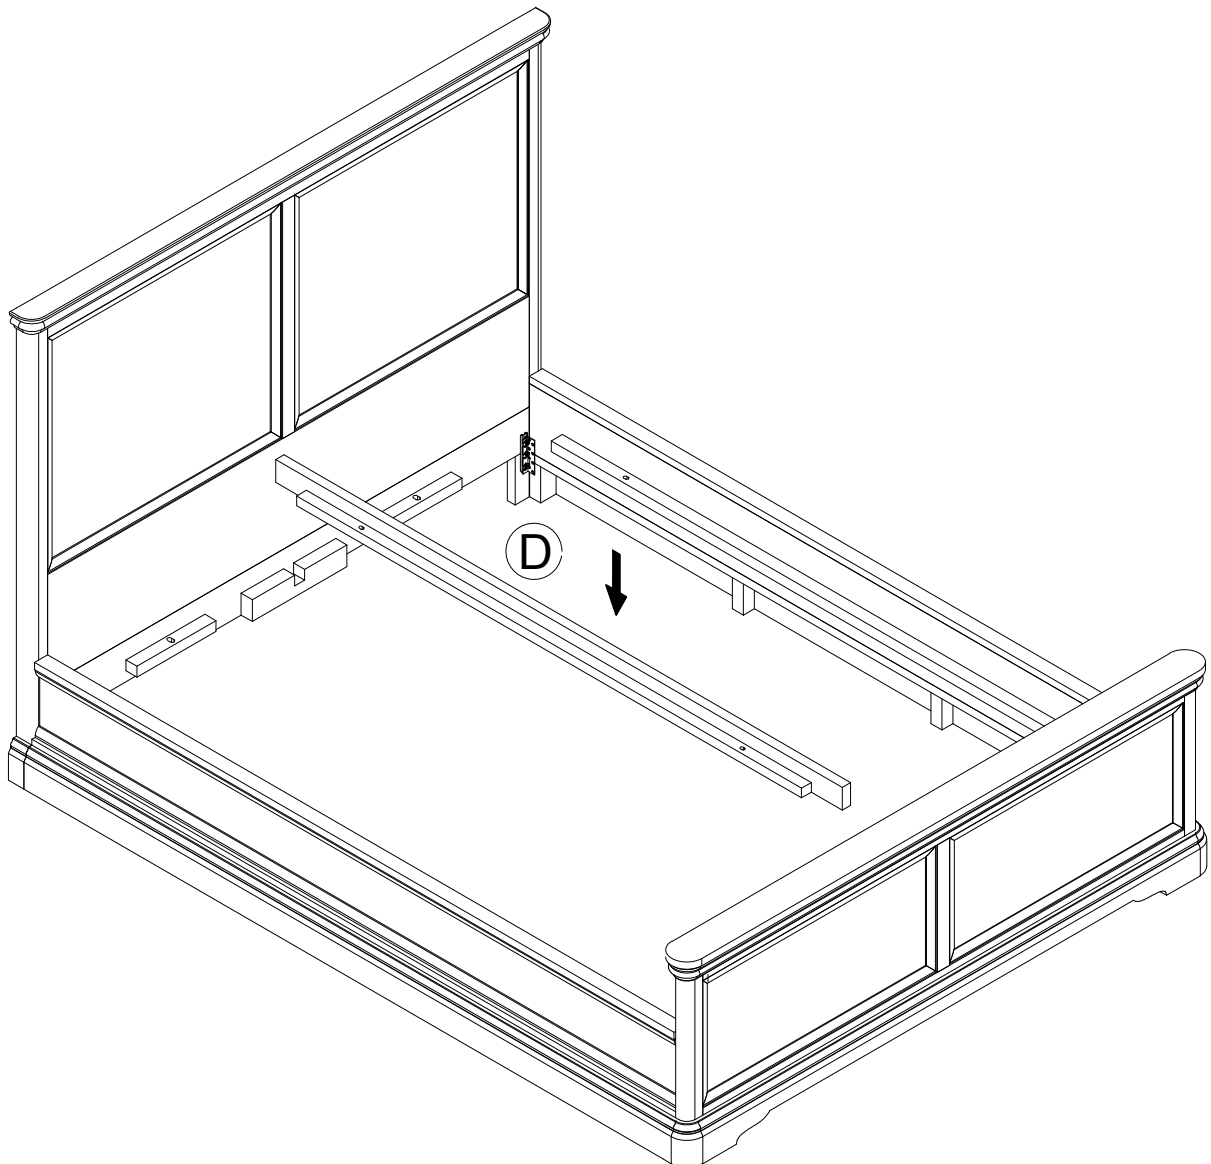


# FEATHER & BLACK

## BORDEAUX BEDFRAME

### 3. Install the Slat Frame

- Place the slat frame evenly across the side rails.
- Secure each half of the slat frame using six bolts per section, tightening firmly.

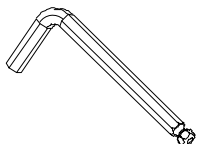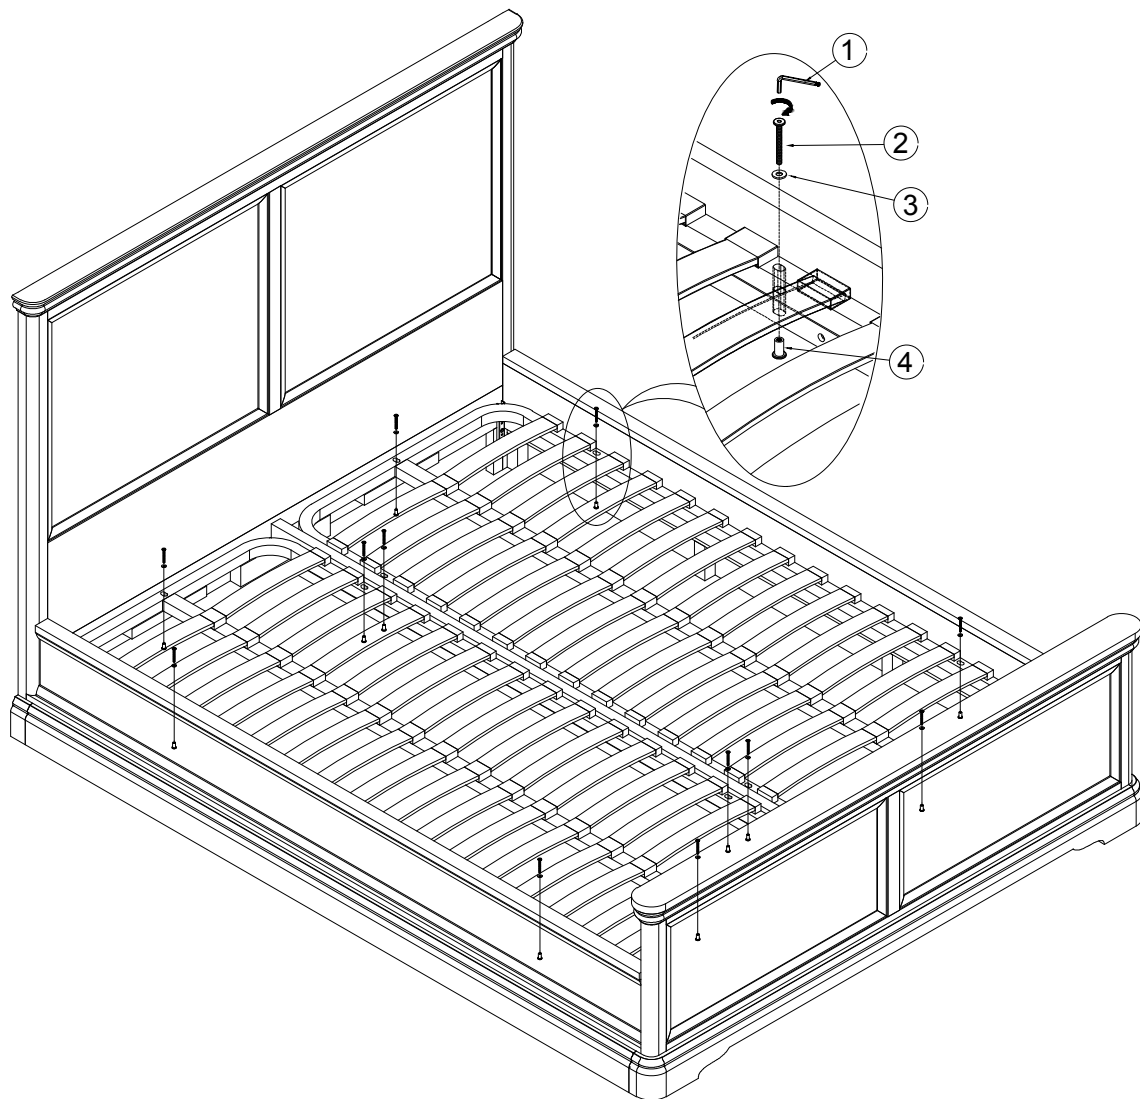


1: Allen Key



2: Bolt



3: Large Washer



4: Nutsert

# FEATHER & BLACK

[featherandblack.com](http://featherandblack.com)